
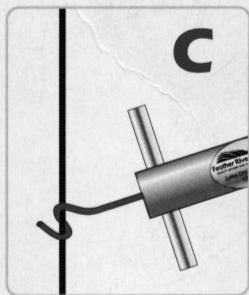
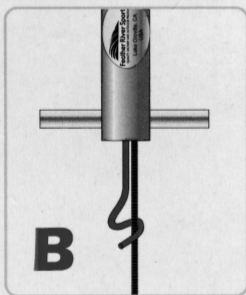


Bow Scale Instructions:

1. Hold the scale in your string hand with your fingers around the "T" handle so that the label faces you when you draw the bow.
2. Place the hook on bow string as shown in Fig. A. Rotate the scale over into position with the hook under the bowstring (Fig. B).
3. With the hook under the bowstring continue down to your draw position (Fig. C).

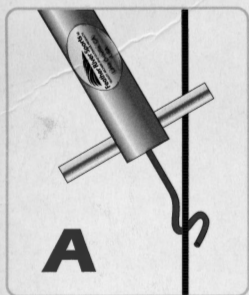

4. Hold the bow in a vertical shooting position (in a safe direction) and draw the string back slowly and smoothly.
5. Upon reaching full draw, let the string back down slowly and smoothly. Do not release the bow scale.
6. Remove the scale from the bowstring.
7. The indicator will remain in the peak draw weight position.
8. To reset the scale, just slide the indicator to the starting position.

NOTE: We have found that two fingers around the "T" handle, with the thumb and remaining fingers lightly holding the scale body is the most consistent way to draw the scale. The "T" handle should be held in the vertical position as a fingers-shooter would.



Feather River Sports ltd
QUALITY OUTDOOR PRODUCTS